

Cartridge and filter combinations

Round pink particulate filters have a plastic fitting on their back side that attaches directly onto that manufacturer's respirators and adapters. White filters do not have a plastic fitting on their back side. Cartridges and filters are not interchangeable from one manufacturer to another. More information about these cartridges, filters, and accessories is shown on our [Cartridges and filters](#) website page.

3M

GERSON

NORTH

These cartridges attach directly onto a respirator. No adapters are needed. Both the pink and white filters can be used with these cartridges.



G2201 or G2203



G1901 or G1903



G2501 or G2503

These round filters attach directly onto a respirator. No adapters are needed. These pink filters can also be used with a cartridge as shown below.



G2240, G2244 or G2246



G1932 or G1934




G2521 or G2522

3M & North's round pink filters can be used on top of cartridge. But you need an adapter that attaches to the cartridge. The filter attaches to the adapters.



cartridge adapter filter
G2201/03 G2239 G2240/44/46

Gerson round pink filters cannot be used with a cartridge.

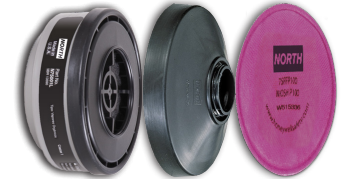

cartridge adapter filter
G22501/03 G2535 G2521/22

White filters are used on top of cartridges. But you need a retainer that holds filter onto the cartridge.



cartridge filter retainer
G2201/03 G2230/32 G2238



cartridge filter retainer
G1901/03 G1920 G1929



cartridge filter retainer
G22501/03 G2523/25 G2536

3M pillow shape filters & North round white filters can be used without a cartridge. But you need an adapter that attaches to mask. And you also need a retainer to hold filter onto the adapter.



adapter filter retainer
G2237 G2230/32 G2238

Gerson pillow shape filters cannot be used without a cartridge.



* adapter filter * retainer
G2537 G2523/25 G2537

* G2537 includes adapter + retainer